

USAGE: 1085,2085,2086,


ADJUSTMENT INSTRUCTIONS.

PLACE ADJUSTMENT WRENCH ONTO BOLT. TURN WRENCH CLOCKWISE TO RETRACT BOLT—COUNTERCLOCKWISE TO EXTEND BOLT.


NOTE:


WITH THE FOLLOWING: TOP BOLT GUIDE ASSY USED


1085,1285,1206,2086 & 3186

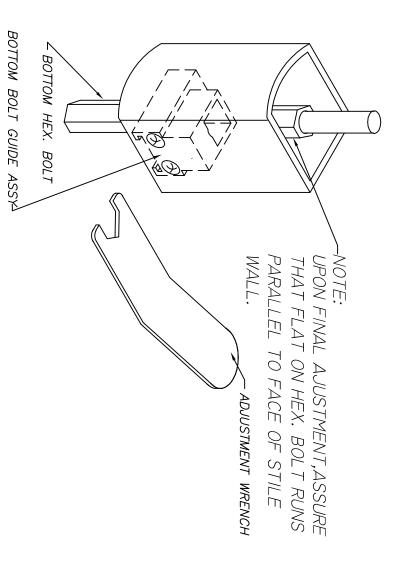

ADJUSTMENT INSTRUCTIONS TOP & BTM BOLT GUIDE ASSY CHECKED SCALE NONE R.M. 11/4/95 ECN1116 ECN982 ECN1873 RM

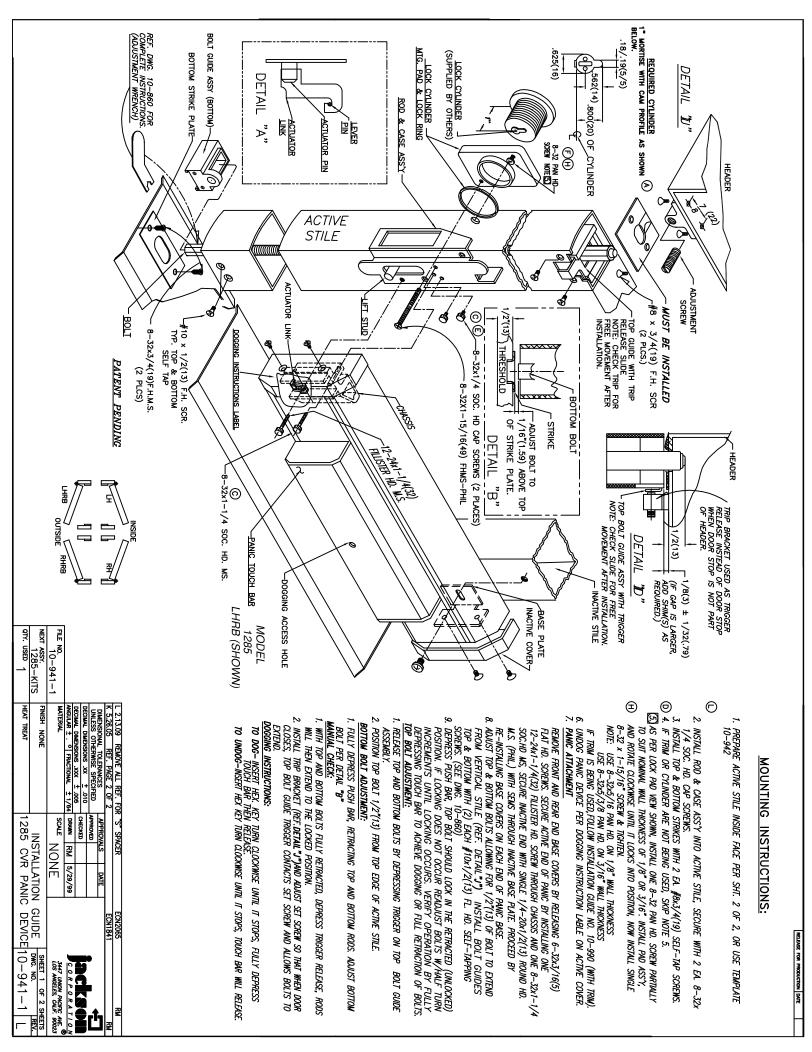

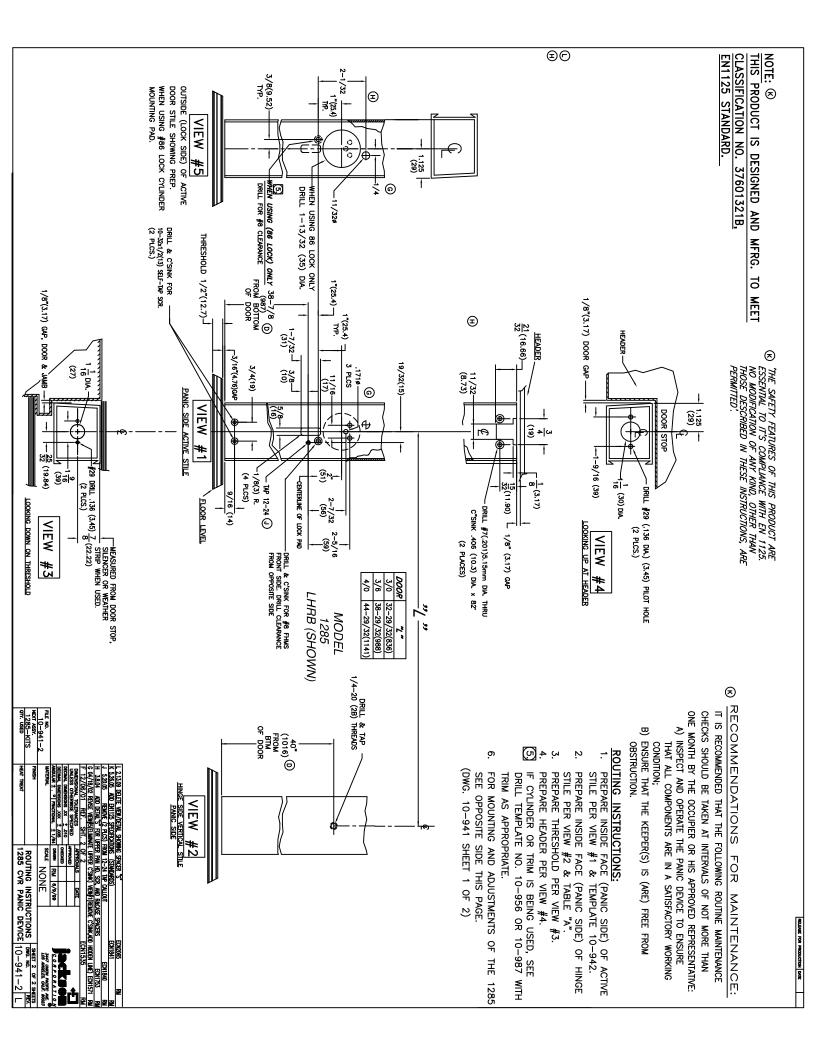

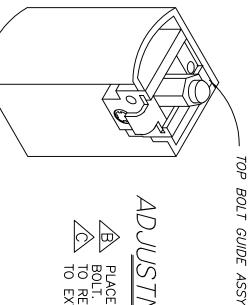

USAGE: 1085,2085,2086,


ADJUSTMENT INSTRUCTIONS.

PLACE ADJUSTMENT WRENCH ONTO BOLT. TURN WRENCH CLOCKWISE TO RETRACT BOLT—COUNTERCLOCKWISE TO EXTEND BOLT.


NOTE:


WITH THE FOLLOWING: TOP BOLT GUIDE ASSY USED


1085,1285,1206,2086 & 3186

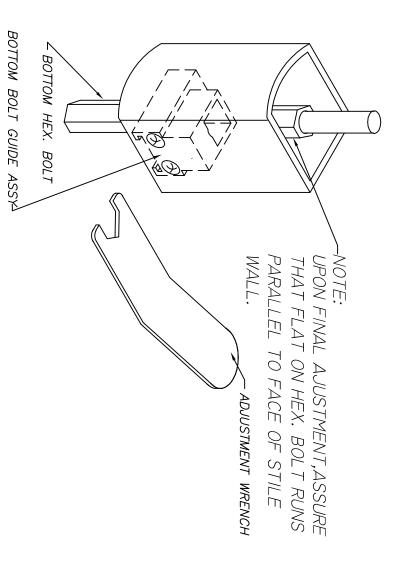

ADJUSTMENT INSTRUCTIONS TOP & BTM BOLT GUIDE ASSY CHECKED SCALE NONE R.M. 11/4/95 ECN1116 ECN982 ECN1873 RM

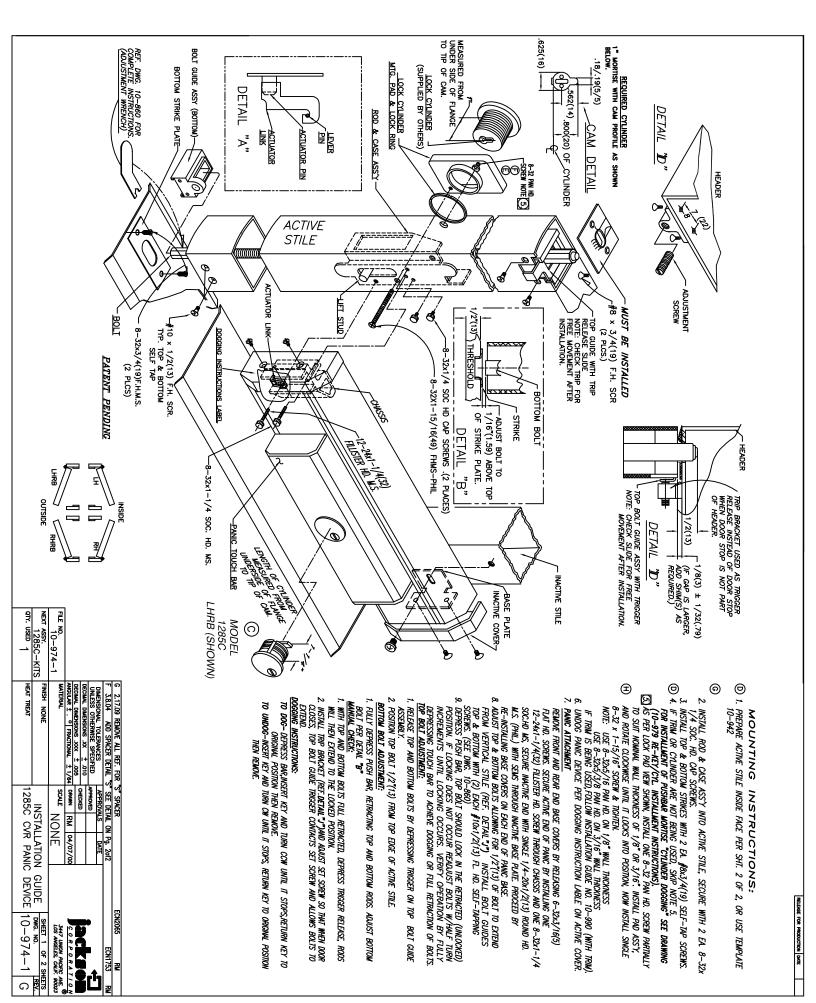

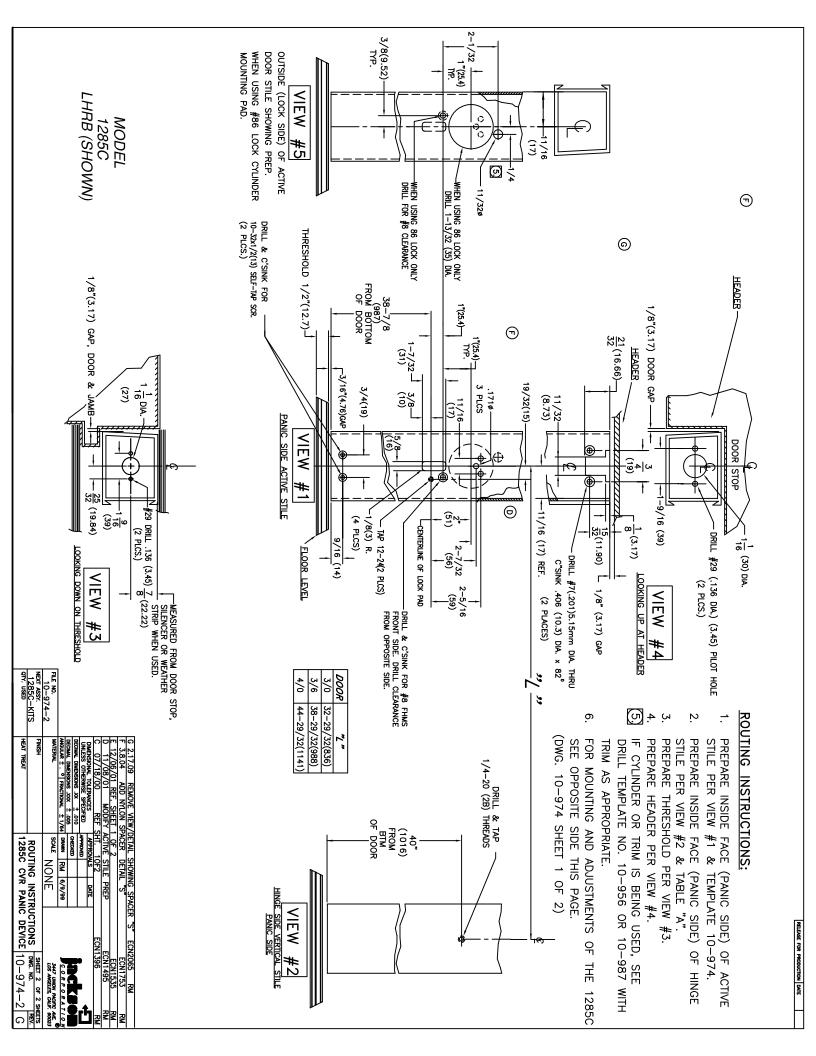

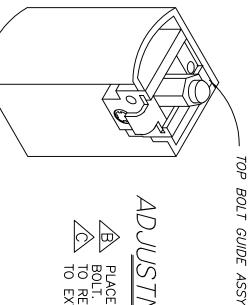

USAGE: 1085,2085,2086,


ADJUSTMENT INSTRUCTIONS.

PLACE ADJUSTMENT WRENCH ONTO BOLT. TURN WRENCH CLOCKWISE TO RETRACT BOLT—COUNTERCLOCKWISE TO EXTEND BOLT.

NOTE:

WITH THE FOLLOWING: TOP BOLT GUIDE ASSY USED

1085,1285,1206,2086 & 3186

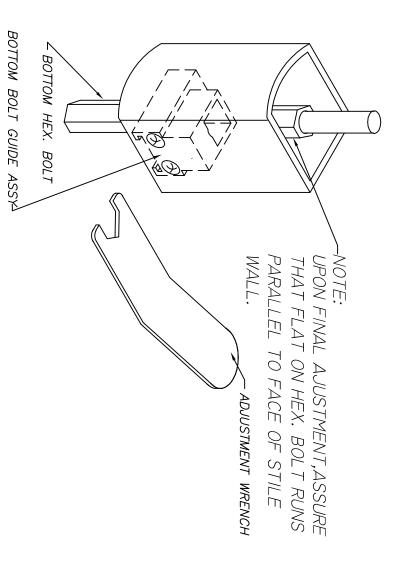

ADJUSTMENT INSTRUCTIONS TOP & BTM BOLT GUIDE ASSY CHECKED SCALE NONE R.M. 11/4/95 ECN1116 ECN982 ECN1873 RM

