INSTALLATION INSTRUCTIONS

MODELS D1022 AND D1023 ARLENE MODEL PASS-THRU





2503 E. Vernon Avenue, Los Angeles, CA 90058-1826 Phone: (800) 421-6144 EXT. 7760 Fax: (800) 458-7496 crlaurence.com Email: transaction@crlaurence.com

ORDER OF ASSEMBLY AND INSTALLATION

| SPECIFICATIONS | |
|--|---|
| PARTS LIST | |
| GLASS FABRICATION | |
| GLASS PREPARATION | |
| SLIDING WINDOW ASSEMBLY | |
| Fit Top Rail on Glass and Loosely Attach Side Rails5 | |
| Loosely Attach Bottom Rail to Side Rails 5 | |
| Square Frames and Secure 6 | |
| Replace Gasket in Outer Edge of D1623 6 | |
| FIXED WINDOW ASSEMBLY | |
| INSTALLATION | |
| Install Overhead Track 8 | |
| Hang Sliding Windows | |
| Install Retractable Guides 9 | |
| Install Jambs | |
| Install Fixed Window | |
| Install D53 Catch | |
| OPTIONAL KEYED LOCK OPERATION | 1 |

IMPORTANT: READ THIS MANUAL THOROUGHLY BEFORE BEGINNING INSTALLATION.

Contact the CRL Transaction Hardware Department at (800) 421-6144 EXT. 7760 or email **transaction@crlaurence.com** for questions.

SPECIFICATIONS

Model D1022 is shown in these instructions.

NOTE: Model D1023 is designed to match storefront subframe.



Right hand sliding panel is closest to clerk's side unless otherwise specified.



PARTS LIST

NOTE: Counter by Others





GLASS FABRICATION

Fixed Glass Width = Window Width divided by 3, minus 1-1/16" (27 mm)

Fixed Glass Height = Window Height minus 2" (51 mm)

Sliding Glass Width = Window Width divided by 3, minus 1-1/16" (27 mm)

Sliding Glass Height = Window Height minus 3-1/4" (83 mm)

GLASS PREPARATION

Install Gasket on Glass

A Fit gasket onto glass at center of the side that will become the top. Smooth to corner and cut a slit through the base of gasket. Do Not cut all the way through to dust lip rims.





- B Continue working gasket around edges, smoothing along each side and cutting at corner.
- Overlap ends at top and cut 1/8" (3 mm) excess. Butt ends together. Mark center of each panel.







NOTE: Assemble one of each of the sliding windows shown.

SLIDING WINDOWS ASSEMBLY (CONTINUED)

3. Square Frames and Secure

IMPORTANT: Tighten each corner a little at a time in rotating sequence, maintaining square condition.



4. Replace Gasket in outer edge of D1623







INSTALLATION



INSTALLATION (CONTINUED)

With the windows in closed position, mark placement for retractable guides. Move the windows to the open position to mark placement for the jambs. Remove the sliding windows before installing retractable guides and jambs.



3



Drill 1" (25 mm) depth hole with 5/16" drill bit.

4. Install Jambs



Secure using fasteners appropriate for the surrounding substrate. Fasteners not included.



Remove backing and install rubber insert.



INSTALLATION (CONTINUED)

5. Install Fixed Window

NOTE: Use fasteners appropriate for the surrounding substrate. Fasteners not included.

(A) Install upper bar stock guide in groove in top track and lower bar stock guide on counter directly below.

NOTE: Center upper bar stock to top track width. Bar stock is cut 2" (51 mm) shorter than fixed window width.



NOTE: If fixed window is too loose, apply silicone sealant to top pocket of upper fixed window frame.



INSTALLATION (CONTINUED) 6. Install D53 Catch (A) Hang Sliding Windows. Place the D53 Catch Base next to Jamb and align with top of Sliding Window. (A)CLERK SIDE CLERK SIDE SLIDING WINDOW FIXED WINDOW B Secure using fasteners appropriate ICUSTOMER for the surrounding substrate. SIDE SLIDING Fasteners not included. WINDOW WINDOW CUSTOMER SIDE SLIDING CLERK SIDE SLIDING B D53 0 C Close windows to mark plunger hole location to be drilled in each Sliding Window. \bigcirc \bigcirc Ø D Remove windows to drill 9/32" (7 mm) diameter B hole, and then reinstall.

CLERK SIDE SLIDING

CUSTOMER SIDE SLIDING

NOTE: D53 Catch is R/L reversible.

(E) Assemble D53 Catch and close window to check.







 \bigcirc

WINDOW

CLERK SIDE SLIDING

CUSTOMER SIDE SLIDING

œ

Ø = ^{9/32}" (7 mm)

OPTIONAL KEYED LOCK OPERATION

(A) Insert Key into Lock Cylinder and turn to unlock.



NOTE: Keyed lock configuration varies according to model number. Contact the CRL Transaction Hardware Department with any questions at (800) 421-6144 EXT. 7760 or email **transaction@crlaurence.com**.