


FLOATING HEADER INSTALLATION INSTRUCTIONS

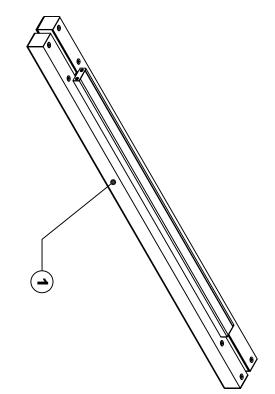

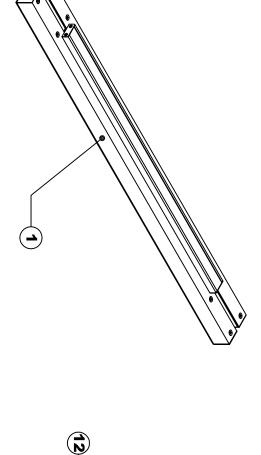

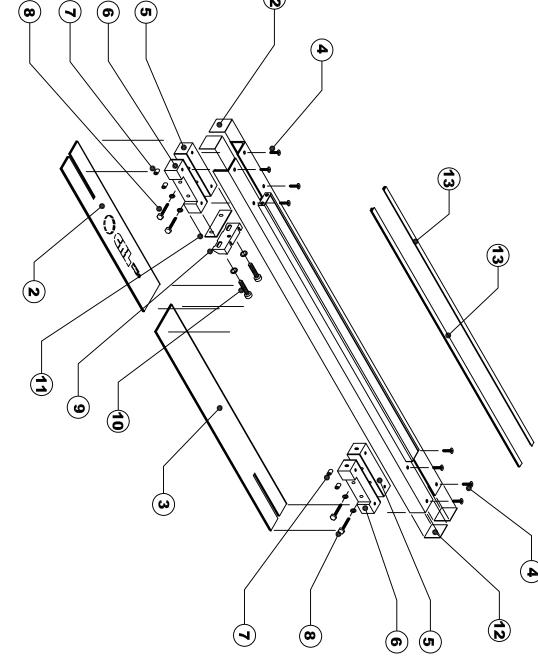



NOTE: INSTRUCTIONS SHOW SINGLE DOOR INSTALLATION.

DOUBLE DOOR INSTALLATIONS INCLUDE CLOSER AT BOTH ENDS.

PROCEDURES:

- REMOVE SNAP FIT CLOSER COVER PLATE (2)
- REMOVE SNAP FIT HEADER COVER PLATE (3)
- REMOVE TRUSS HEAD SCREWS (4) FROM TOP OF HEADER.
- THIS WILL RELEASE THE 2 CLAMP BLOCK ASSEMBLIES FROM THE HEADER CHANNEL.
- REMOVE 2 SOCKET HEAD SCREWS (10) FROM END OF CLAMP BLOCKS RELEASING THE CLOSER END PLATE (9) AND GASKET (1)
- Ú REMOVE 4 HEX HEAD SCREWS (8) FROM RECESS IN INNER CLAMP BLOCK AND SEPARATE CLAMP BLOCKS (f 5) AND (f 6). BE SURE TO RETAIN 4 GLASS GROMMETS (f 7).



FLOATING HEADER SYSTEM

Phone Orders (800) 421-6144 Fax Orders (800) 262-3299 C.R. Laurence Architectural Products www.crlaurence.com

13	12	11	10	ဖ	œ	7	6	5	4	ယ	2	_	N _o
13 GLAZING GASKET	END CAP	FIBER GASKET	SOCKET HEAD SCREW	CLOSER END PLATE	HEX HEAD SCREW	GLASS GROMMET	INSIDE CLAMP BLOCK	OUTSIDE CLAMP BLOCK	TRUSS HEAD SCREWS	HEADER COVER PLATE	CLOSER COVER PLATE	FLOATING HEADER ASSEMBLY	DESCRIPTION
2	4	_	2	_	4	4	2	2	8	_	_	_	QTY